Model: 323D SA EXCAVATOR NES

Configuration: 323D SA Excavator NES00001-UP (MACHINE) POWERED BY C6.4 Engine

Disassembly and Assembly C6.4 Engine for Caterpillar Built Machines

Media Number -KENR8106-09

Publication Date -01/10/2017

Date Updated -18/10/2017

i02743771

Flywheel - Remove

SMCS - 1156-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	1
В		Forcing bolts M16 - 2 by 120 mm	2

Start By:

- a. Remove the crankshaft position sensor. Refer to Disassembly and Assembly, "Crankshaft Position Sensor Remove and Install".
- b. Remove the muffler. Refer to Disassembly and Assembly, "Muffler Remove and Install".

NOTICE			
Keep all parts clean from contaminants.			
Contaminants may cause rapid wear and shortened component life.			

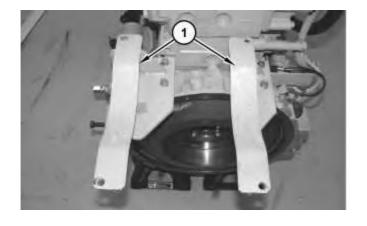


Illustration 1 g01374966

1. Remove muffler brackets (1).

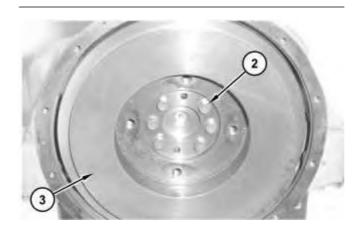


Illustration 2 g01374968

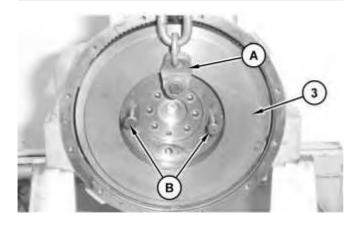


Illustration 3 g01374970

- 2. Remove bolts (2).
- 3. Install Tooling (A) and a suitable lifting device onto flywheel (3).
- 4. Use Tooling (B) in order to remove flywheel (3) out of the housing. The weight of flywheel (3) is approximately 50 kg (110 lb).

5. Perform the following procedure in order to remove the flywheel ring gear.

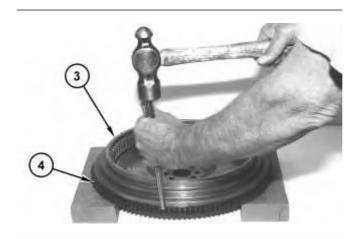


Illustration 4
Typical Example

g01374977

a. Place flywheel (3) and ring gear (4) on suitable cribbing.

Note: Mark the orientation of ring gear (4) on flywheel (3) for assembly purposes.



Always wear protective gloves when handling parts that have been heated.

- b. Raise the temperature of ring gear (4) uniformly.
- c. Remove the ring gear (4) by tapping ring gear (4) all the way around flywheel (3).
- d. Reposition flywheel (3) in order to remove ring gear (4).

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com