



Service Repair Manual

Models

318B L, 318B N and 318B LN
Excavator

Product: EXCAVATOR

Model: 318B N EXCAVATOR 7KZ

Configuration: 318B L & 318B LN Excavators 7KZ00001-UP (MACHINE) POWERED BY 3046 Engine

Disassembly and Assembly 3046 Engine For Caterpillar Built Machines

Media Number -SEN6458-05

Publication Date -01/04/2004

Date Updated -22/04/2004

i01646268

Flywheel - Remove

SMCS - 1156-011

Removal Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

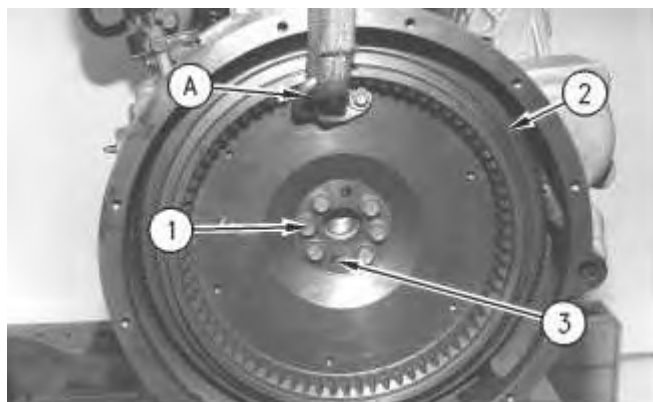


Illustration 1

g00527024

1. Install Tool (A), a strap, and a suitable lifting device onto flywheel (2) .
2. Remove six bolts (1) that secure flywheel (2) from the crankshaft.
3. Remove flywheel (2). The weight of the flywheel is 50 kg (110 lb).

Note: Dowel pin hole (3) is slightly offset in order to ensure correct installation.

4. Check the condition of the dowels (not shown). If the dowels are damaged, use new parts for replacement.

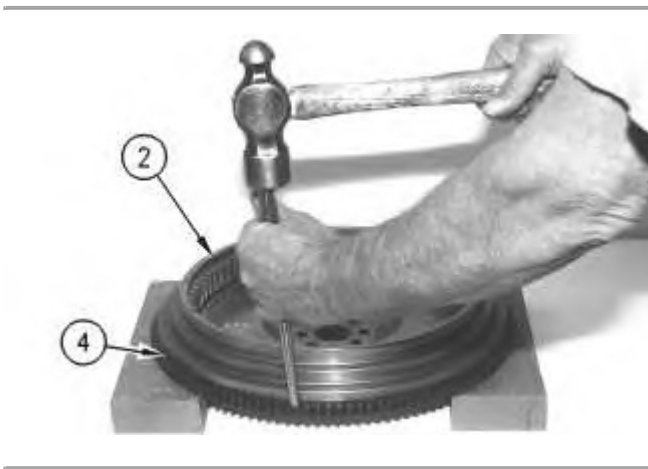


Illustration 2

g00527069

5. Check the condition of the ring gear (4). Replace the ring gear with a new part if the gear is worn or damaged.
6. Place flywheel (2) and ring gear (4) on a suitable support.

Note: Identify the orientation of the ring gear on the flywheel for the correct positioning when the new ring gear is installed.

7. Use a hammer and a punch in order to remove ring gear (4) from the flywheel.

Product: EXCAVATOR

Model: 318B N EXCAVATOR 7KZ

Configuration: 318B L & 318B LN Excavators 7KZ00001-UP (MACHINE) POWERED BY 3046 Engine

Disassembly and Assembly 3046 Engine For Caterpillar Built Machines

Media Number -SEN6458-05

Publication Date -01/04/2004

Date Updated -22/04/2004

i01646270

Flywheel - Install

SMCS - 1156-012

Installation Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	138-7575	Link Bracket	1

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.



WARNING

Always wear protective gloves when handling parts that have been heated.

1. Use an oven and heat ring gear (2) to a maximum temperature of 150 °C (302 °F). Install the ring gear.



Illustration 1

g00562859

2. Position the ring gear (4) on flywheel (2) .

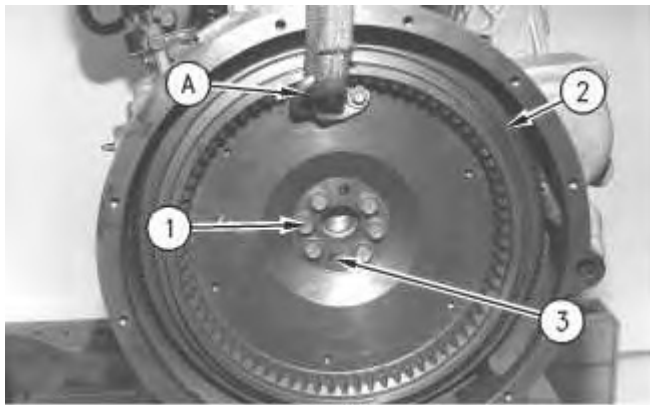


Illustration 2

g00527024

3. Check the condition of the dowels (not shown). If the dowels are damaged, use new parts for replacement.
4. Install Tool (A), a strap, and a suitable lifting device onto flywheel (2) .
5. Install flywheel (2). The weight of the flywheel is 50 kg (110 lb).

Note: Dowel pin hole (3) is slightly offset in order to ensure correct installation.

6. Install six bolts (1) in order to secure flywheel (2) onto the crankshaft. Tighten the bolts to a torque of 83 ± 5 N·m (61 ± 4 lb ft).
7. Remove Tool (A) .
8. Check the flywheel runout. Refer to Testing and Adjusting, "Flywheel - Inspect" for more information on flywheel runout.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com