



Service Repair Manual

Models

349E L Excavator

Product: EXCAVATOR

Model: 349E L EXCAVATOR TFG

Configuration: 349E L Excavators TFG00001-UP (MACHINE) POWERED BY C13 Engine

Disassembly and Assembly 349E Excavator and 349E MHPU Mobile Hydraulic Power Unit C13 Engine Supplement

Media Number -KENR9847-03

Publication Date -01/01/2013

Date Updated -28/01/2013

i05239586

Fan Drive - Disassemble - Hydraulic Fan Drive

SMCS - 1359-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty
A	1P-1861	Retaining Ring Pliers	1
B	9U-7480	Compressing Tube	1
C	1P-1859	Retaining Ring Pliers	1
D	1P-1863	Retaining Ring Pliers	1

Start By:

- Remove the Hydraulic fan Drive. Refer to Disassembly and Assembly, "Fan Drive - Remove and Install".

Note: Cleanliness is an important factor. Before you begin the disassembly procedure, thoroughly clean the exterior of the components. This procedure will help to prevent dirt from entering the internal mechanism. Precision components can be damaged by contaminants or by dirt. Perform disassembly procedures on a clean work surface. Keep components covered and protected at all times.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair

of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

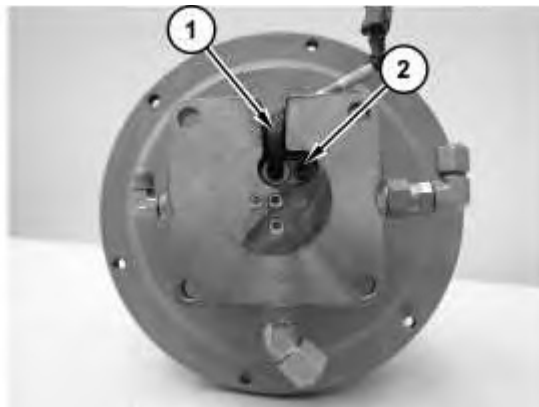


Illustration 1

g01208862

1. Remove bolt (2) and sensor (1).

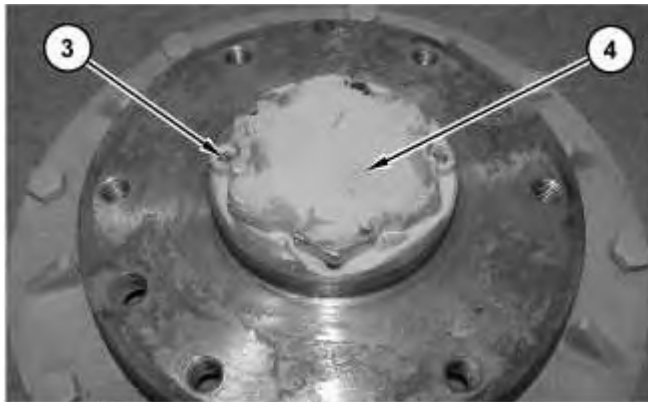


Illustration 2

g01333292

2. Remove bolts (3). Remove retainer (4).
-



Illustration 3

g01333295

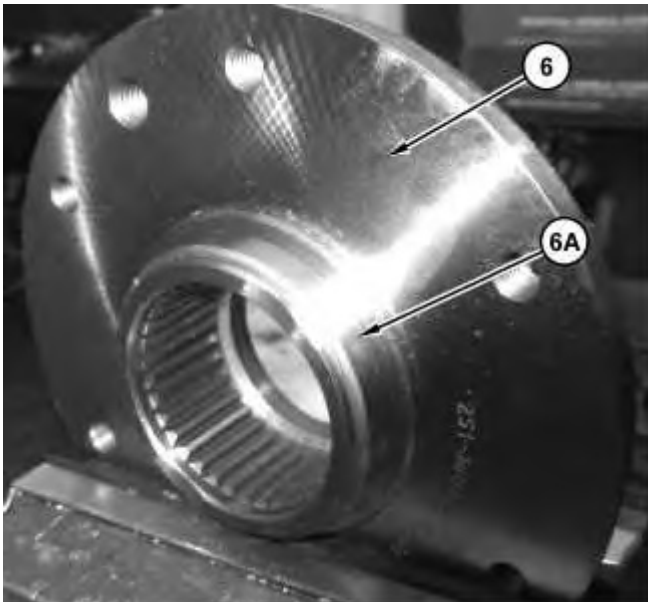


Illustration 4

g02089003

3. Remove O-ring seal (5) and drive flange (6).
 4. Firmly secure drive flange (6) with a suitable vise. Protect drive flange (6) in order to prevent damage during clamping.
 5. Use a hammer and a chisel in order to break sleeve (6A). Use extreme care to prevent damage to drive flange (6).
-

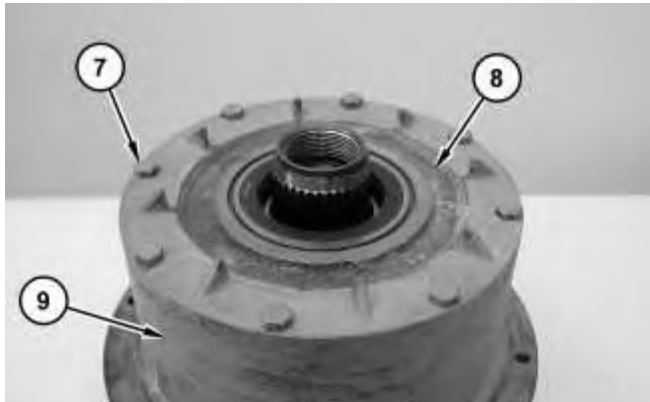


Illustration 5

g01208866

6. Remove bolts (7). Separate cover assembly (8) from case (9).



Illustration 6

g01333297

7. Position cover assembly (8) on the opposite side.
8. Remove O-ring seal (10) from cover assembly (8).

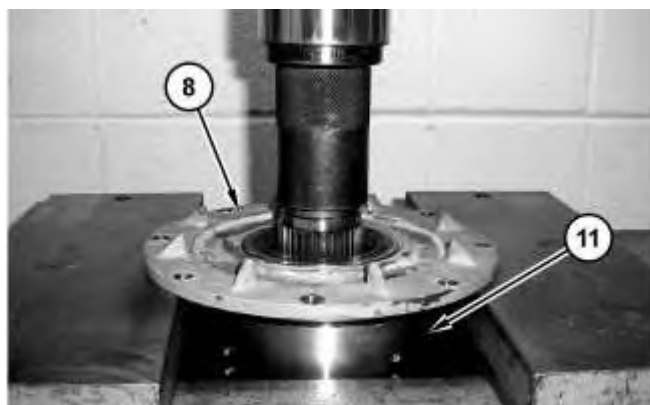


Illustration 7

g01208919

9. Use a suitable press in order to separate cover assembly (8) and clutch housing assembly (11).

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com