



Service Repair Manual

Models

248 Skid Steer Loader

Product: SKID STEER LOADER

Model: 248 SKID STEER LOADER 6LZ

Configuration: 236, 246, 248 Skid Steer Loader 6LZ00001-00999 (MACHINE) POWERED BY 3034 Engine

Disassembly and Assembly 3034 Engine for Caterpillar Built Machines

Media Number -SEN5013-08

Publication Date -01/11/2008

Date Updated -14/11/2008

i01354467

Fuel Injection Pump - Remove

SMCS - 1251-011

Removal Procedure

Start By:

- A. Remove the air inlet manifold. Refer to Disassembly and Assembly, "Inlet Manifold - Remove".
- B. Remove the fuel shutoff solenoid. Refer to Disassembly and Assembly, "Fuel Shutoff Solenoid - Remove and Install".

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Caterpillar Tools and Shop Products Guide" for tools and supplies suitable to collect and contain fluids on Caterpillar products.

Dispose of all fluids according to local regulations and mandates.

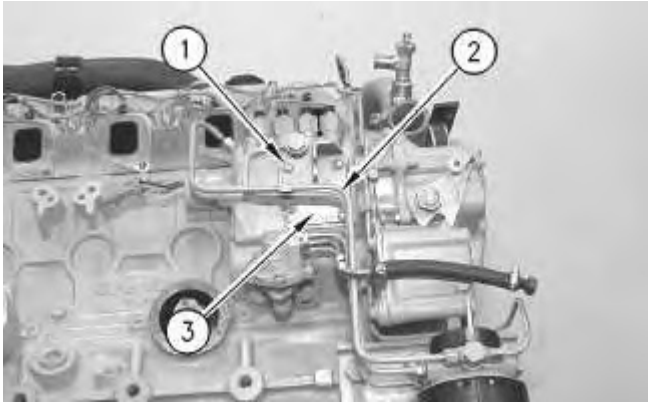


Illustration 1

g00599562

1. Remove fuel lines (2) from the engine. Immediately cap all openings or plug all openings in order to prevent contamination of the fuel system.
2. Remove bolts (1) and cover (3) from the engine.

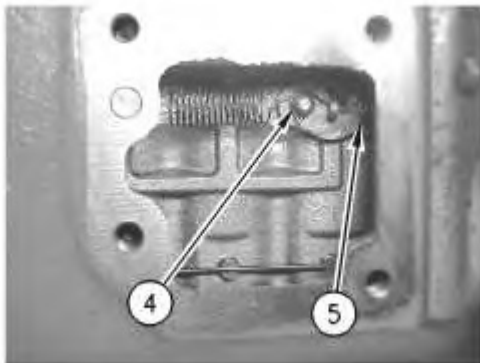


Illustration 2

g00720261

3. Disconnect spring (5) from the groove in pin (4) .
-

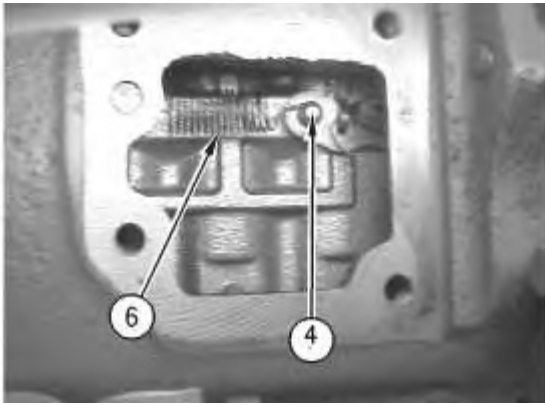


Illustration 3

g00720270

Note: Spring (6) may fall into the engine if the spring comes loose from pin (4) .

4. Disconnect spring (6) from the groove in pin (4) .

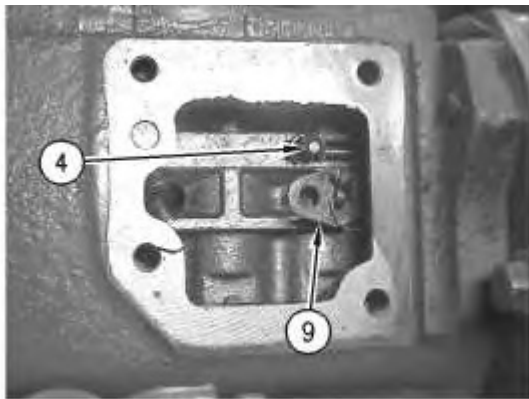


Illustration 4

g00720275

5. Disconnect governor control linkage (9) from pin (4) .

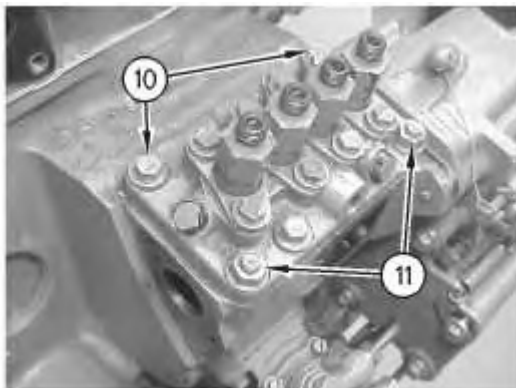


Illustration 5

g00720284

6. Remove bolts (10) and nuts (11) that secure the fuel injection pump to the engine.

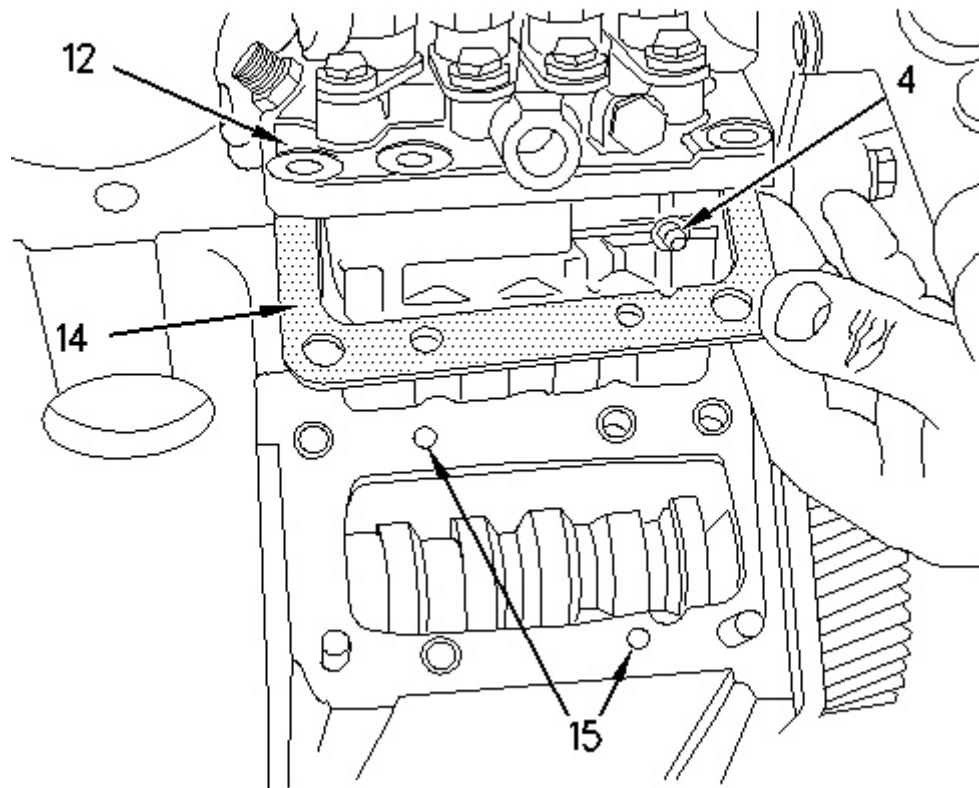


Illustration 6

g00720291

7. Remove fuel injection pump (12) from the engine.

Note: Record the thickness of each shim and the number of shims for reassembly. The fuel injection timing is determined by the shim pack thickness that is between the fuel injection pump and the mounting face on the cylinder block. For more information on the fuel injection pump, refer to the Specifications Module, "Fuel Injection Pump" topic.

8. Remove shims (14) from fuel injection pump (12) .
9. Inspect dowels (15) for damage. If the dowels are damaged, use new dowels for replacement.
10. Inspect pin (4) for wear or damage. If pin (4) is worn or damaged, use a new pin for replacement.
11. Cover the opening in the fuel injection pump housing for fuel injection pump (12) in order to prevent debris from falling into the engine.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com