



Service Repair Manual

Models

305E2 Mini Hydraulic Excavator

Product: MINI HYD EXCAVATOR

Model: 305E2 MINI HYD EXCAVATOR H5M

Configuration: 305E2 Mini Hydraulic Excavator H5M00001-UP (MACHINE) POWERED BY C2.4 Engine

Disassembly and Assembly

C2.4 Tier 4 Final Engines for Caterpillar Built Machines

Media Number -UENR7319-02

Publication Date -01/07/2018

Date Updated -01/08/2018

i06523433

Inlet Manifold - Remove and Install

SMCS - 1058-010

Removal Procedure

Start By:

- a. Remove exhaust gas recirculation valve.
- b. Remove fuel injection lines.
- c. Remove fuel manifold (rail).



Illustration 1

g06008649

1. Remove bolt (1).

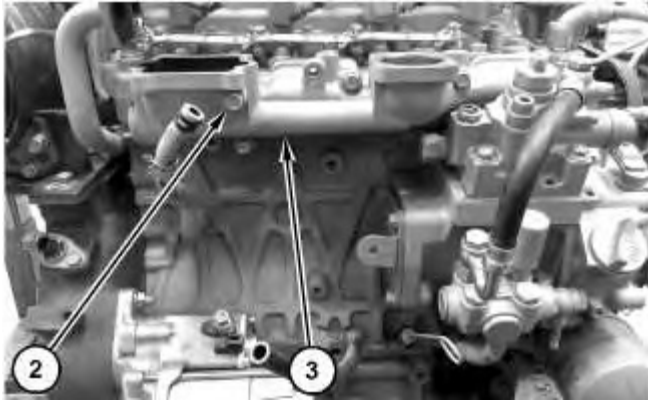


Illustration 2

g06008673

2. Remove bolts (2) and inlet manifold (3).

Installation Procedure

1. Install inlet manifold (3) in the reverse order of removal.

Product: MINI HYD EXCAVATOR

Model: 305E2 MINI HYD EXCAVATOR H5M

Configuration: 305E2 Mini Hydraulic Excavator H5M00001-UP (MACHINE) POWERED BY C2.4 Engine

Disassembly and Assembly

C2.4 Tier 4 Final Engines for Caterpillar Built Machines

Media Number -UENR7319-02

Publication Date -01/07/2018

Date Updated -01/08/2018

i06539555

Inlet and Exhaust Valves - Remove and Install

SMCS - 1105-010

Removal Procedure

Table 1

Required Tooling			
Tool	Part Number	Part Description	Qty
A	5S-1330	Valve Spring Compressor	1

Start By:

- a. Remove cylinder head.

NOTICE

Keep all parts clean from contaminants.

Contaminants may cause rapid wear and shortened component life.

1. Clean the bottom mating surface of the cylinder head. Check the depth of the valves below the face of the cylinder head before the valve springs are removed. Refer to Specifications, "Cylinder Head Valves" for the correct dimensions.
 2. Place a temporary identification mark on the heads of the valves to identify the correct position.
 3. Use a suitable lifting device to position the cylinder head with the valve springs upward. The weight of the cylinder head is approximately 28 kg (61 lb).
-



Illustration 1

g06013564

WARNING

Personal injury can result from being struck by parts propelled by a released spring force.

Make sure to wear all necessary protective equipment.

Follow the recommended procedure and use all recommended tooling to release the spring force.

4. Install Tooling (A) in position on the cylinder head and compress the valve spring to remove inlet and exhaust valves (1).



Illustration 2

g06013581

NOTICE

Ensure that the valve spring is compressed squarely or damage to the valve stem may occur.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com