

Product: TRACK-TYPE TRACTOR

Model: D8R TRACK-TYPE TRACTOR 7XM

Configuration: D8R Track-Type Tractor 7XM00001-UP (MACHINE) POWERED BY 3406 Engine

Disassembly and Assembly D8R Track-Type Tractor Power Train

Media Number -SEN8327-11

Publication Date -01/08/2018

Date Updated -17/08/2018

i01022271

Track Roller Frame - Disassemble

SMCS - 4151-015

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Description	Qty
A	0S-1587	Bolt (1/2 inch by 13 by 1 3/4 inch)	1
	1F-7958	Nut (1/2 inch by 13)	1
B		Bar Stock (1/2 inch by 2 inch by 10 inch)	4
C	1P-0520	Driver Gp	1
	8E-2898	Plate	1
	1H-3110	Bearing Puller	1
D	FT-2213	Strap (Group)	1
F	9U-6600	Manual Pump	1
	1U-5197	Hydraulic Cylinder	1
	1P-1838	Adapter (1 1/4 inch by 12)	1
	6V-2108	Sleeve	1
	6V-3187	Adapter (1 1/4 inch by 12)	1
	5P-4184	Tool Stud (1 1/4 inch by 12 by 18 inch)	1
G	FT-1713	Wedge	2
H	136-1452	Internal Tip Pliers	1

Start By:

- a. Remove the track roller frame. See the procedure in Disassembly and Assembly, "Track Roller Frame - Remove" in this module.

**WARNING**

Personal injury can result from performing service on the track roller frame.

Refer to Special Instruction, SMHS8273 for inspection and removal procedures before performing any service.

**WARNING**

Personal injury or death can result from lifting a heavy assembly.

The heavy assembly can fall if using an incorrect hoist to lift the load.

Be sure the hoist has the correct capacity to lift a heavy assembly. Approximate weight of the assembly is given below.

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat[®] products.

Dispose of all fluids according to local regulations and mandates.

1. Place the track roller frame on a level surface. Support each end of the track roller frame with the track guides.
-

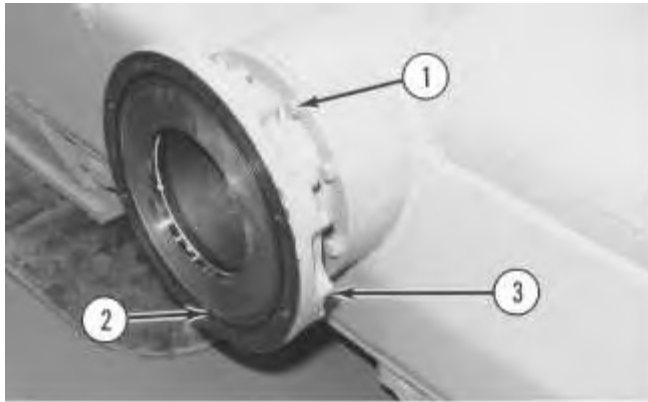


Illustration 1

g00621097

2. Remove O-ring seal (2) from seal retainer (3).
3. Remove eight bolts (1) and retainer (3) from the track roller frame.
4. Remove the O-ring seal from retainer (3) which seals between the retainer and the track roller frame.



Illustration 2

g00617654

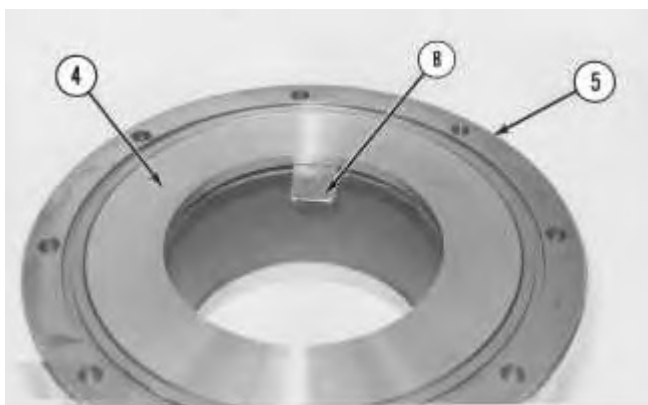


Illustration 3

g00617658

5. Position tool (A) according to Illustration 2. Rotate the nut in order to apply pressure to plate (4). When plate (4) and retainer (5) are separated sufficiently, insert tool (B) in order to keep the plate and the retainer separate. Insert bar stock (B) at four equally spaced locations around the retainer.
6. Use a soft hammer around the outer diameter of the retainer to loosen and remove plate (4).

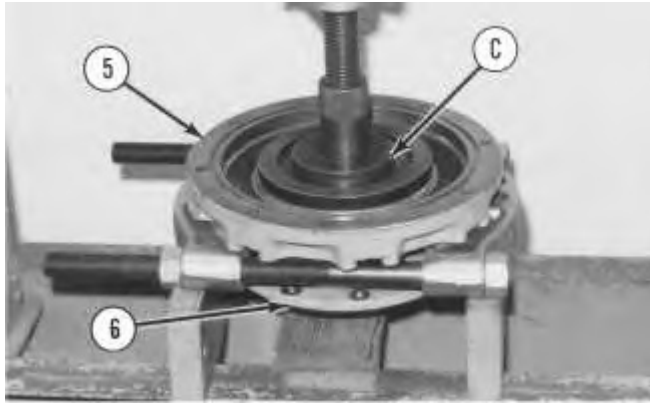


Illustration 4

g00617660

Note: The **8E-2898** Plate is the same component that is used on the end of the pivot shaft.

Note: Mark the retainers before disassembly for correct assembly in the original positions.

7. Use a hydraulic press and tool (C) to remove retainer (6) from retainer (5).



Illustration 5

g00617661

8. Use a hydraulic press to remove seal (7) from retainer (5).
-

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com